

Yealink UAD Config Sample

UAD Templates allow you to add additional configuration to a single extensions telephone, a group of telephone extension or all extensions. UAD programming can be done in two sections on the system.

1. Settings > UAD > User Agent General Auto Provisioning Template:

1. Allpows you to program all phone extensions assigned to the UAD

2. Home > Extensions > Select Extension > Advanced Options > UAD Auto Provisioning Template

1. Allows you to program a single telephone extension.

Set admin Password

```
security.user_password = admin:c@ompl3xpassWord
```

Transfer direectly to Voicemail

```
phone_setting.custom_softkey_enable = 1
edk.edklist.1.action = *400*$P1N10$
edk.edklist.1.enable = 1
edk.edklist.1.mname = Intercom
edk.edklist.2.action      =      $KSoftKey1$*125$PEnter
Ext&C10&N&M$$Trefer$
edk.edklist.2.enable = 1
edk.edklist.2.mname = VoicemailTx
edk.edkprompt.1.enable = 1
edk.edkprompt.1.label = Enter Ext
edk.edkprompt.1.type = numeric
edk.edkprompt.1.userfeedback = visible
```

Set Static IP address on telephone

```
network.internet_port.type = 2
network.internet_port.ip = 192.168.1.10
network.internet_port.mask = 255.255.255.0
```

```
network.internet_port.gateway = 192.168.1.1
network.static_dns_enable = 1
network.primary_dns = 8.8.8.8
```

Auto Provisioning

```
auto_provision.server.username = HTTP username
auto_provision.server.password = HTTP password
auto_provision.server.url = ux.firelinecommunications.com
```

Ringtones

```
distinctive_ring_tones.alert_info.1.ringer = 2
distinctive_ring_tones.alert_info.1.text = RING 1
distinctive_ring_tones.alert_info.10.ringer = 10
distinctive_ring_tones.alert_info.10.text = RING 10
```

Forward features

```
forward.always.enable = 0
forward.always.off_code = *72
forward.always.on_code = *71
forward.busy.enable = 0
forward.no_answer.enable = 0
```

For more information regarding auto provisioning see our [Yealink – User Docs](#)