


Grandstream WP826/836 Key Layout Description

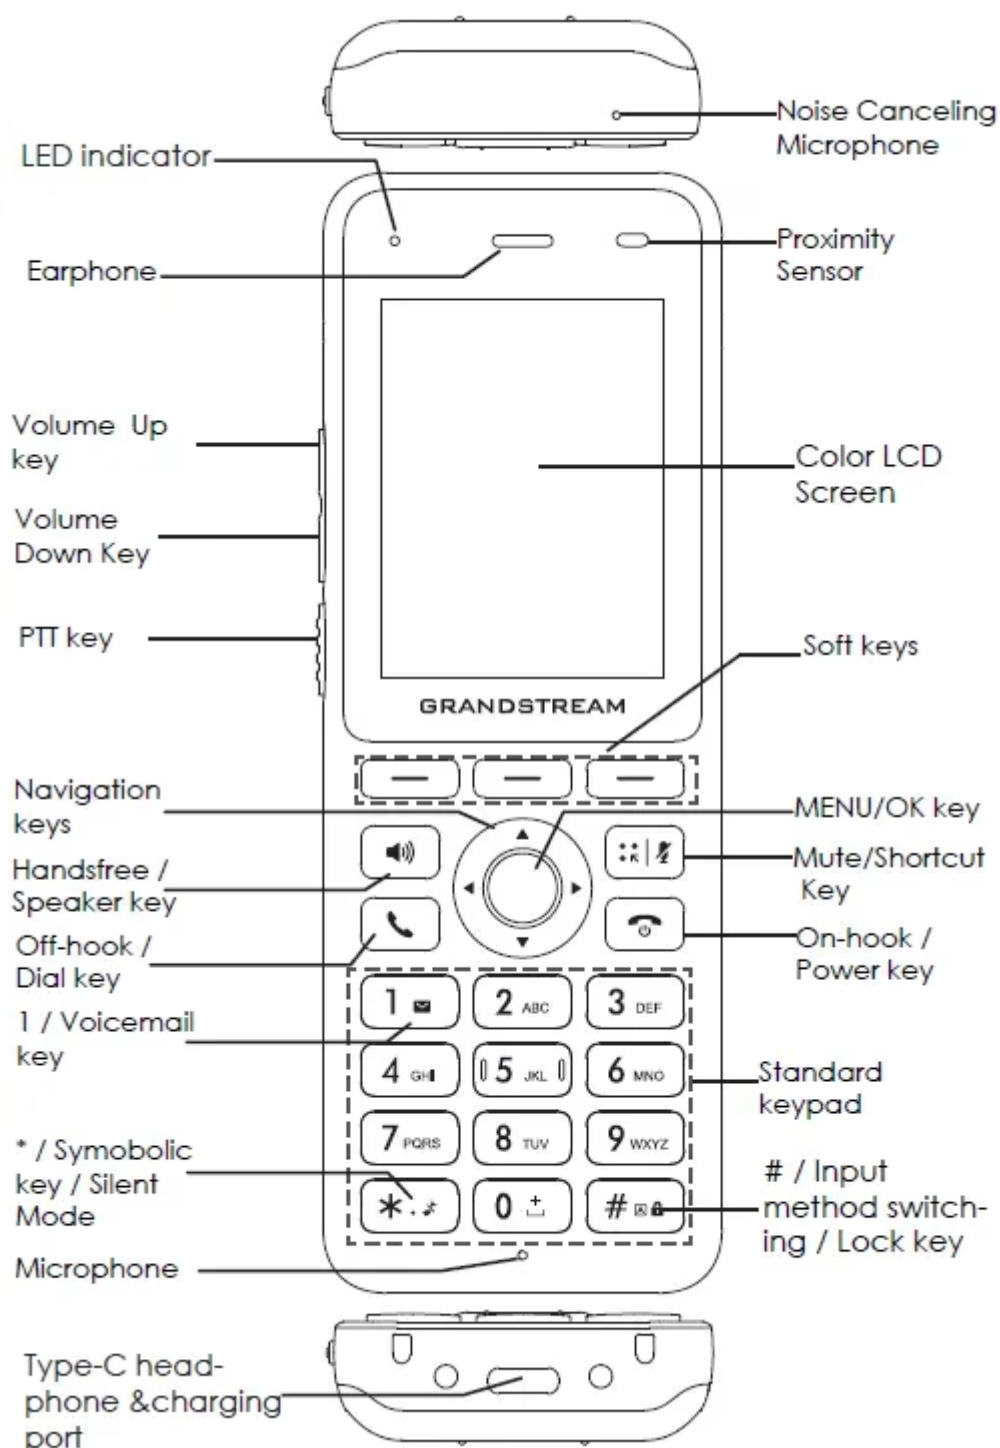

Key	Description
LED indicator	A small light that provides visual notifications for various events like incoming calls, messages, or charging status.
Earphone	Delivers audio output.
Volume Up key	A button used to increase the volume of audio output.
Volume Down Key	A button used to decrease the volume of audio output
PTT Key	PTT (Push-to-Talk) button, to initiate PTT call. This button can also be configured to trigger Alarm.
Navigation keys	Buttons used to navigate through menus, apps, and interfaces.
Off-hook / Dial key	Initiates or answers calls when pressed and also used to dial numbers when making outgoing calls.
1 / Voicemail key	Long pressing this key initiates a call to your voicemail service, allowing you to check for new messages or manage voicemail settings.
Standard keypad	A grid of numeric keys used for dialing phone numbers, entering text, and navigating through menus by inputting numbers or letters associated with options.
* / Symobolic key / Silent Mode	This key is used to toggle the phone's silent mode on and off, muting all incoming call and message notifications.
Handsfree / Speaker key	Pressing this key enables the phone's speakerphone function, allowing for hands-free communication during calls.

Key	Description
Microphone	Picks up audio earpiece and hands-free calls
Type-C headphone & charging port	This port serves a dual purpose, allowing you to connect Type-C headphones for audio output and charging the phone using a compatible Type-C cable.
Softkeys	These buttons are assigned a specific function or shortcut, such as launching a specific app, activating a feature, or performing a predefined action.
Mute/Shortcut Key	A button that quickly silences incoming calls or notifications when pressed, and may also be customizable to serve as a shortcut for accessing frequently used features.
# / Input method switching / Lock key	Does one of the following: • When pressing #: Redials the last dialed number, for this to work the Key As Send option under Account settings => Call settings should be set to # • Lock key: Long press to lock keypad against unintentional entries, for this to work enable lock screen from LCD settings under System settings => Security Settings => Screen Lock • Input method switching: Allows switching between different input methods (like keyboards types)
On-hook / Power key	This key serves a dual purpose, ending calls or switching off the phone when pressed for a longer duration, and turning on the phone or waking it from sleep mode when pressed briefly.

Key	Description
MENU/OK key	This key serves a dual purpose, opening the menu interface or confirming selections, such as when navigating through apps or options.
Softkeys	Correspond to functions displayed on the LCD. These functions change depending on the current context.
Color LCD Screen	2.4 inch (240×320) IPS color LCD screen
Proximity sensor	The proximity sensor can detect when the phone is close to the caller's face, turning off the display to prevent accidental touches and save battery life.
Noise Canceling Microphone	A microphone equipped with technology to reduce background noise, resulting in clearer audio during calls by minimizing unwanted sounds from the surrounding environment.