

How to Program Buttons on a Yealink EXP50 Expansion Module

The Yealink EXP50 is an expansion module that adds extra programmable keys to your Yealink desk phone. These keys can be set for features such as speed dial, busy lamp field (BLF), call forwarding, or other phone functions. You can program these keys directly from the module without using the phone's web interface.

Steps to Program a Button

1. Access the EXP50 Key Settings

1. Press and hold the **button** on the EXP50 that you want to program.
 - Hold it until the **"Program Key"** menu appears on the phone's screen.
-

2. Choose the Key Type

1. Use the **navigation keys** on your phone to scroll through the available key types.
2. Common key types include:
 - **Speed Dial** – Call a contact with one button press.
 - **BLF (Busy Lamp Field)** – Monitor another extension's status (idle, ringing, busy).

- **Call Forward** – Forward calls quickly to another number.
- **Transfer** – Transfer calls to a saved number.
- **Line** – Assign another phone line.

3. Highlight the option you want, then press **OK**.

3. Enter the Key Information

- Depending on the key type you selected, enter the required details:
 - **Speed Dial / BLF** – Enter the phone number or extension.
 - **Label** – Type the name you want to appear on the EXP50 screen (e.g., “John” or “Support”).
 - **Line** (if required) – Select the line to associate with the key.

Use the phone’s keypad to type numbers or names.

4. Save the Key

1. After entering the details, press **Save** (soft key under the screen).
2. The button will now show the label you entered on the EXP50 display.

5. Test the Button

- Press the programmed button to confirm it works as expected:
 - A **Speed Dial** button should place a call.
 - A **BLF** button should light up to show the extension's status.
 - A **Call Forward** button should activate forwarding.
-

Notes

- You can reprogram any key at any time by repeating the steps above.
 - The EXP50 has multiple pages of keys. Use the **arrow keys** on the phone to flip between pages.
 - The exact key options may vary depending on your phone model (e.g., T53W, T54W, T57W).
-