

Pair Bluetooth Headset to Yealink Telephone

1. Put your Bluetooth headset into pairing mode (typically indicated by a flashing red/blue light).
2. On the Yealink desk phone, press the **Menu** softkey.
3. Go to **Basic > Bluetooth**.
4. Ensure Bluetooth is toggled **On**.
5. Select **Bluetooth Scan** (or **Paired Bluetooth Device > Scan**) to search for nearby devices.
6. Select your headset from the list of **Available Devices** and press **Connect**.
7. If prompted, enter the PIN (usually 0000 or 1234).