

# Yealink-Easy Way to Connect to a Wireless Network via App


Yealink IP phones can automatically connect to the wireless network via a Yealink-supplied App.

## Requirements

- Mobile operating system: Android 8.0.
- A mobile application (App): Yealink Wi-Fi Assistant.

## Instructions


1. Download the Yealink APP from the Google Play store  
[Yealink Wi-Fi Assistant – Apps on Google Play](#)
2. Launch the App Yealink Wi-Fi Assistant.
3. Tap Add Immediately to add a wireless network:
  1. Enter the desired value in the SSID field.
  2. Select the desired value in the Secure Mode field.
    1. If you select WPA-PSK or WPA2-PSK from the Security Mode field, select the desired cipher type in the Cipher Type field.
    2. If you select WPA-EAP or WPA2-EAP from the Security Mode field, select the desired cipher type and then enter the desired value in the User Name field.
  3. Enter the desired value in the Password field.
4. Tap Finish

**NOTE:** You can tap  Add Wi-Fi info to add more wireless networks. Up to three wireless networks can be saved.


## Viewing the Wireless Network Details

1. Tap  after the desired wireless network.


## Editing the Wireless Network


1. Tap  -> Edit.
2. Edit the wireless network information.
3. Tap Finish.

## Deleting the Wireless Network

1. Tap  -> Delete Wi-Fi info.  
The screen prompts you whether to delete the network.
2. Tap OK.

## Creating a Hot Spot

1. Tap  after the desired wireless network.
2. Copy the SSID and password respectively.
3. Go to system hotspot page to fill in the corresponding SSID and password.
4. Enable Mobile Hotspot.

**NOTE:** You can tap  Share More to select one or more wireless networks to share.

## Viewing the Connection Status

You can view how many IP phones are connected to the wireless network via App successfully and the total number of completed distribution network.

1. Tap 

**NOTE:** You can tap clear data to clear the connection data.

[APPLIES TO] SIP-T58A, CP960, SIP-T57W, SIP-T54W, SIP-T53W, SIP-T53, SIP-T48U, SIPT48S, SIP-T46U, SIP-T46S, SIP-T43U, SIP-T42S, SIP-T41S, SIP-T27G, and CP920

