

# Yealink – Update Configuration

When requesting changes to your phone or working with support you may be asked to update your configuration. This procedure will allow some changes to your telephone without having to reboot the telephone.

1. Press the MENU button on the phone.
2. Move to Basic.
3. Move down to Update Configuration.